



FULL DC INVERTER SYSTEMS

OPERATION MANUAL
KJR-29B

COMMERCIAL AIR CONDITIONERS SDV4



Original instructions

- This manual gives detailed description of the precautions that should be brought to your attention during operation.
- In order to ensure correct service of the wired remote controller please read this manual carefully before using the unit.
- For convenience of future reference, keep this manual after reading it.

I. Safety precautions

The following contents are stated on the product and the operation manual, including usage, precautions against personal harm and property loss, and the methods of using the product correctly and safely. After fully understanding the following contents (identifiers and icons), read the text body and observe the following rules.

■ Identifier description

Identifier	Meaning
 Warning	Means improper handling may lead to personal death or severe injury.
 Caution	Means improper handling may lead to personal injury or property loss.

[Note]: 1. “Harm” means injury, burn and electric shock which need long-term treatment but need no hospitalization
2. “Property loss” means loss of properties and materials.

■ Icon description

Icon	Meaning
	It indicates forbidding. The forbidden subject-matter is indicated in the icon or by images or characters aside.
	It indicates compulsory implementation. The compulsory subject-matter is indicated in the icon or by images or characters aside.

Warning

 Warning	Delegate installation	Please entrust the distributor or professionals to install the unit. The installers must have the relevant know-how. Improper installation performed by the user without permission may cause fire, electric shock, personal injury or water leakage.
--	-----------------------	---

 Usage Warning	Forbid	Do not spray flammable aerosol to the wired remote controller directly. Otherwise, fire may occur.
	Forbid	Do not operate with wet hands or let water enter the wired remote controller. Otherwise, electric shock may occur.

II. Main parameters and functions

● Main parameters

Table 2-1

Input voltage	DC +5V
Ambient temperature	-5~43°C
	RH40%~RH90%


● Functions

Main functions of this wired remote controller as follows:

- 1.Connect with indoor unit via the four ports of A, B, C, D.
- 2.Set operation mode via buttons.
- 3.Provided with LCD display function.
- 4.Provided with timing function.

III. Wired remote controller

KJR-29B

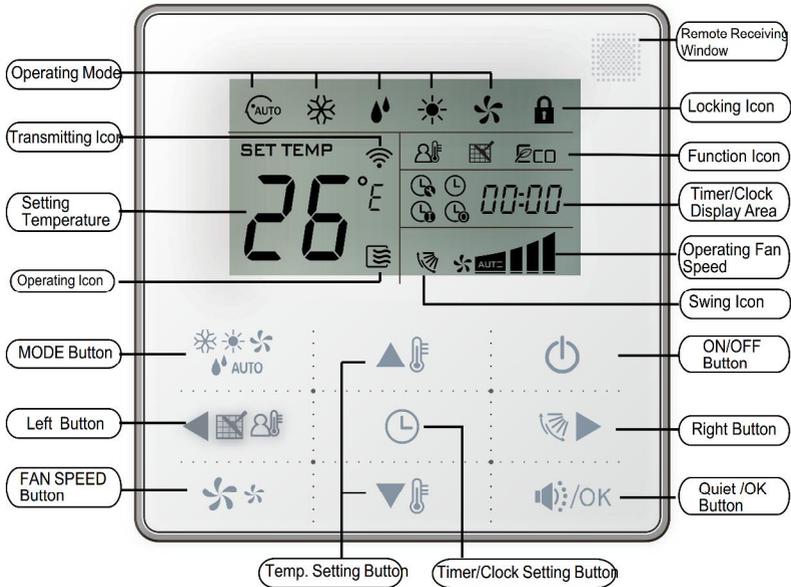

CAUTION

This controller has not economic operating function.

IV. Operation instructions

● Remote signal receiving function

The wired remote controller can be a remote signal receiving device, you can use the wireless remote controller to control the air-conditioner through the wired remote controller when the system have been powered on.



CAUTION

The wired remote controller will not receive the swing controlling instruction. For the indoor unit with swinging function, you can directly use the wireless remote controller to control swinging through the display panel of the indoor unit, or use the swing button on the wired remote controller to control the indoor unit for swinging.

● On and Off the air-conditioner

Press the On/Off button to control the indoor unit on and off status.

When the unit is turned off, press the ON/OFF button, the unit will be turned on and the operating icon lights up.

When the unit is turned on, press the ON/OFF button, the unit will be turned off and the operating icon lights off.

● Set the operating mode

Press the mode button to set the operating mode, after each button press the operation mode will circle as follow:
AUTO→COOL→DRY→HEAT→FAN
→AUTO

When the controller has been set to cool-only, then there is no HEAT mode.

● Fan speed setting

Under COOL, HEAT and FAN modes, press the fan speed button can adjust the fan speed setting.

After each fan speed button press will circle as follow:
AUTO→LOW→MID→HIGH→AUTO.

Under AUTO and DRY modes the fan speed is not adjustable and the default fan speed is auto.

● Temperature setting

Under AUTO, COOL, DRY, HEAT modes, press the temperature setting buttons  and  to set the temperature, the adjusting range is 17°C~30°C (or 62°F~88°F).

The setting temperature cannot be adjusted under FAN mode.

● Timer on and Timer off setting

Press the timer/clock setting button, then enter into the timer on setting status, and the screen will display  and .

Press  and  buttons to adjust the timer. when the timer setting is less than 10 hours, each press  or  will increase or decrease 0.5 hour. When the timer setting is more than 10 hours, each press  or  will increase or decrease 1 hour, the

maximun timer setting is 24 hours.

After finish adjusting the timer on setting, press the /OK button or wait for 5 seconds to confirm and exit the timer on setting.

Under the timer on setting status, press the timer/clock setting button, then enter into the timer off setting status, and the screen will display  and .

The setting method of timer off is the same as the timer on.

Under timer setting state, set the timer on and timer off to be 0.0h can cancel timer on and timer off.



CAUTION

If the wired remote controller has been set timer on/ off, press the ON/OFF to turn on/ turn off the unit then the timer will be canceled simultaneously.

• Clock setting

Long press the timer/clock setting button for 3 seconds, then enter into the clock setting status.

The hour position of the clock will flash, and can press  and  to adjust the hour value.

After finishing the hour setting, press left button  or right button  to switch to minute position setting, then the minute position will flash, press  and  to adjust the minute value.

After finish the clock setting, press the  button or wait for 5 seconds to confirm and exit the setting state.

• Quiet operation

Under COOL, HEAT, FAN modes, press the  button to set into the quiet operation, it is used to reduce the running noise through setting the fan speed to low.

Under AUTO, DRY mode, the fan speed is auto and the  button

doesn't work.

• Lock the wired remote controller

Press the temperature adjusting buttons  and  simultaneously, the wired remote controller enters into locking state, and the locking icon  will be lighted up.

Under the locking state, the wired remote controller will not respond to the buttons pressing and the control instruction from the wireless remote controller.

Simultaneously press the temperature adjusting buttons  and  again can cancel the locking state.

• Air filter cleaning reminding function

The wired remote controller records the total running time of the indoor unit, when the accumulated running time reaches the pre-setted value, the air filter cleaning reminding icon  be lighted up, to remind that

the air filter of the indoor unit need to be cleaned.

Long press  for 3 seconds, and reset the reminding icon and the wired remote controller will re-accumulate the total running time of the indoor unit.



CAUTION

The default setting value of the reminding function is 2500 hours, and it can change to be 1250 hours, 5000 hours or 10000 hours. The setting methods please refer to the installation manual.

• Swing Function

If the indoor unit supports swing function, press the right button  to adjust the air outlet direction of the indoor unit. Long press this button for 3 seconds can turn on or turn off the auto swing function, the swing icon  will be lighted up when the auto swing function is turned on.

• Follow Me function

When the system is running and the operating mode is AUTO, COOL or HEAT, press the  button will activate the Follow Me function, press this button again to deactivate the function. Operating mode changeover will deactivate the function as well.

when the Follow Me function is activated, the icon  will be light up, the wired remote controller will display room temperature read from the local sensor, and transmit the temperature value to the indoor unit every 3 minutes.

V. TECHNICAL CERTIFICATION AND REQUIREMENT

- **EMC should conform to the CCC certification.**

Take-back of electrical waste
Information for Users to Disposal of electrical and electronic equipment
(private households)

Icon on the product or in the accompanying documentation means that used electric or electronic products must not be disposed together with domestic waste. For the correct disposal of the product hand it over to a place for take-back, where it is collected free of charge. By correct disposal of the product you can help to preserve valuable natural resources and help in preventing potential negative impacts to environment and human health, which could be consequence of incorrect disposal of waste. Ask for more details from local authorities, nearest collection point, in Waste Acts of respective country, in the Czech Republic in Act no. 185/2001 Coll., in the wording of later regulations. In case of incorrect disposal of this waste, a fine can be imposed according to national regulations.



Manufacturer:
Sinclair Corporation Ltd.
1-4 Argyll Street
London W1F 7LD
United Kingdom

Supplier and technical support:
Nepa, spol.s.r.o.
Purkyňova 45
612 00 Brno
Czech Republic
www.nepa.cz

Toll-free info line:
+420 800 100 285

